



PARTS CATALOGUE CATALOGUE DE PIÉCES DÉTACHÉES

F2.5BMH'19 (6EG5)



1T6EG-300FA

()

F2.5BMH
PARTS CATALOGUE
©2019 by Yamaha Motor Co., Ltd.
1st edition, May 2019
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.
Printed in Japan.

F2.5BMH
CATALOGUE DE PIECES DETACHEES
©2019 par Yamaha Motor Co., Ltd.
1^{re} édition, mai 2019
Tous droits réservés
Toute réimpression ou utilisation
non autorisée sans la permission écrite
de la Yamaha Motor Co., Ltd.
est formellement interdite.
Imprimé au Japon

FOREWORD

This Parts Catalogue is related to the parts for the model(s) on the cover page. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after the issue of the Parts Catalogue will be announced in the Parts News.
It is advisable that you make the necessary corrections to the Parts Catalogue according to the Parts News.

2. Abbreviations

The following abbreviations are used in this Parts Catalogue.

“UR” Use specified parts number.

“UN” Use as many as needed.

“AP” Alternate Parts

“LM” Locally Made (Parts need to be ordered locally)

“F#” Frame No. (Applicable machine No.)

“O/S” Over Size

3. The number of components for assembly

- Parts, which are to be supplied in an assembly, are listed with a dot (.) in front of the part name as shown below.
- The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

PART NO.	DESCRIPTION	Q'TY	REMARKS
2F5-83310-60	FRONT FLASHER LIGHT ASSY	2	
115-83311-60	.BULB (6V-18W)	1	

4. Applicable colours of graphics are represented in the “REMARKS” as shown below.


PART NO.	DESCRIPTION	Q'TY	REMARKS
2N4-24110-00-X5	FUEL TANK COMP.	2	MXR
3J1-24240-10	.GRAPHIC, FUEL TANK	1	FOR MXR

5. Note that the illustrations for reference in finding parts numbers are not to be used for assembling. When assembling, please use the applicable service manual.

6. The asterisk (*) before a reference number indicates modified items after the first edition.

7. Applicable Serial No.

Engine Serial No.

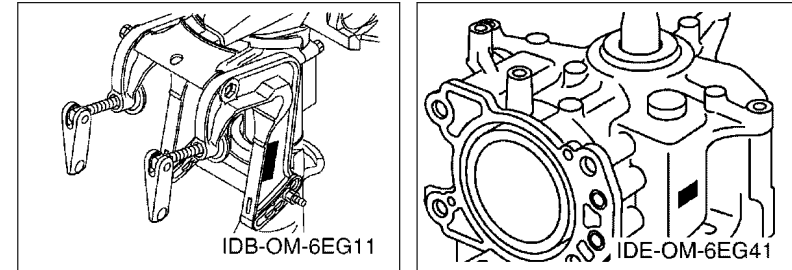

8. Applicable Engine Starting Serial No.

Model	Serial No.	Model	Serial No.
F2.5B	6EG-1018786		

9. Applicable Colour Code

Abbreviation	Colour Name	Colour Code
DBN1	DARK BLUISH GRAY 1	008D

10. Quantity Column Information

Column No.	Name Of Q'ty Column	Applicable Model
1	6EG5	F2.5BMH

AVANT-PROPOS

Ce catalogue de pièces détachées concerne les pièces pour le(s) modèle(s) indiqué(s) sur la page de couverture. Lorsque vous commandez des pièces de rechange, veuillez vous référer à ce catalogue de pièces détachées et indiquer clairement les numéros et les noms des pièces détachées.

1. Les modifications ou ajouts ayant été effectués après la parution du catalogue de pièces détachées seront décrits dans les Bulletins d'information concernant les pièces détachées.

Il est recommandé que vous apportiez les corrections nécessaires au catalogue des pièces détachées en vous référant aux Bulletins d'information.

2. Abréviations

Dans ce catalogue, les abréviations suivantes sont utilisées:

“UR” Utiliser le numéro de pièces spécifié.

“UN” Utiliser autant que nécessaire.

“AP” Pièces de substitution

“LM” Fabrication locale (les pièces doivent être commandées localement.)

“F#” N° de cadre (applicable au N° de série)

“O/S” Surdimensionné

3. Nombre de pièces d'un assemblage

- Les pièces fournies comme composants d'un assemblage sont précédées d'un point (.) de la manière indiquée ci-dessous.
- Le chiffre apparaissant à la droite de chaque composant indique la quantité de pièces pour chaque unité d'assemblage.

N° PIECES	DESCRIPTION	QTE	REMARQUES
2F5-83310-60	ENS. CLIGNOTANT AVANT	2	
115-83311-60	.AMPOULE (6V-18W)	1	

4. Les couleurs concernant les graphiques sont indiquées dans la colonne “REMARQUES”, comme indiqué ci-dessous.


N° PIECES	DESCRIPTION	QTE	REMARQUES
2N4-24110-00-X5	RESERVOIR A ESSENCE.	2	MXR
3J1-24240-10	.GRAPHIQUE	1	POUR MXR

5. Veuillez noter que les illustrations sont indiquées à titre de référence pour trouver les numéros de pièces, non pour être utilisées lors de l'assemblage. Lors de l'assemblage, veuillez utiliser le manuel d'entretien adéquat.

6. L'astérisque (*) placé devant un numéro de référence indique des éléments qui ont été modifiés après la première édition.

7. N° de série applicable

N° de Série du moteur

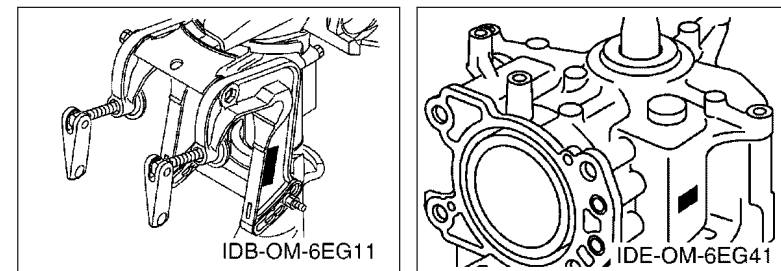

8. N° de série initial du moteur applicable

Modèle	N° de série	Modèle	N° de série
F2.5B	6EG-1018786		

9. Code couleur applicable

Abréviation	Nom de la couleur	Code couleur
DBN1	DARK BLUISH GRAY 1	008D

10. Informations relatives à la colonne Quantité

N° de la colonne	Nom de la colonne Qté	Modèle applicable
1	6EG5	F2.5BMH

CONTENTS

SCHEDULED SERVICE PARTS.....	1
TOP COWLING.....	2
CYLINDER & CRANKCASE 1.....	3
CRANKSHAFT & PISTON.....	4
CYLINDER & CRANKCASE 2.....	5
VALVE.....	6
INTAKE.....	7
CARBURETOR.....	8
FUEL.....	9
STARTER.....	11
GENERATOR.....	12
BOTTOM COWLING.....	13
STEERING.....	14
CONTROL.....	16
BRACKET.....	17
UPPER CASING.....	19
LOWER CASING & DRIVE 1.....	20
LOWER CASING & DRIVE 2.....	22
REPAIR KIT 1.....	23
REPAIR KIT 2.....	24
REPAIR KIT 3.....	25

INDEX

NUMERICAL INDEX.....	26
----------------------	----

TABLE DES MATIERES

PIECES MAINTENANCE PERIODIQUE.....	1
CAPOT SUPERIEUR.....	2
CYLINDRE & CARTER 1.....	3
VILEBREQUIN & PISTON.....	4
CYLINDRE & CARTER 2.....	5
SOUPAPE.....	6
ADMISSION.....	7
CARBURATEUR.....	8
CARBURANT.....	9
DEMARREUR.....	11
GENERATRICE.....	12
CAPOT INFERIEUR.....	13
DIRECTION.....	14
COMMANDE.....	16
SUPPORT.....	17
FOURREAU.....	19
BOITIER D'HELICE TRANSMISSION1.....	20
BOITIER D'HELICE TRANSMISSION2.....	22
KITS DE REPARATION 1.....	23
KITS DE REPARATION 2.....	24
KITS DE REPARATION 3.....	25

INDEX

INDEX NUMERIQUE.....	26
----------------------	----

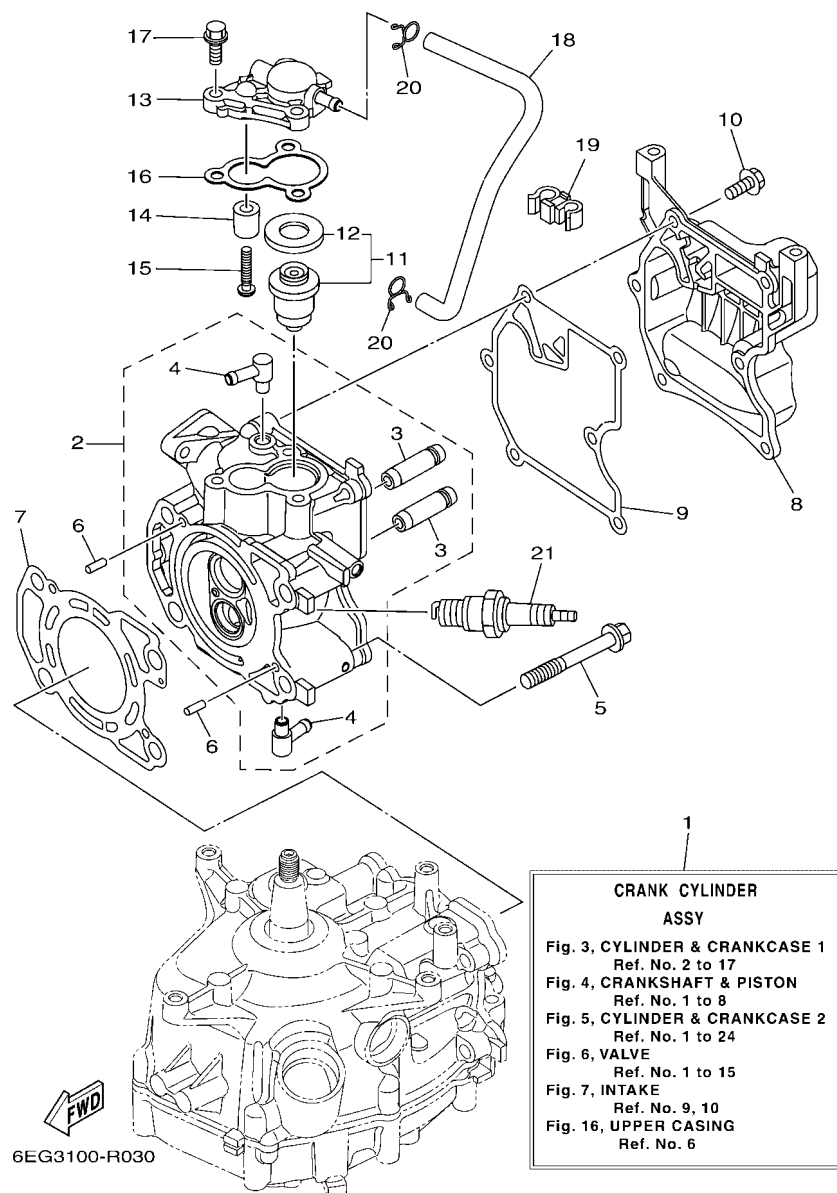


FIG. 3 CYLINDER & CRANKCASE 1


CYLINDRE & CARTER 1

REF. NO.	PART NO. N° PIECES	DESCRIPTION DESCRIPTION	6EG5					REMARKS REMARQUES
1	6EG-WE090-02-1S	CRANK CYLINDER ASSY EMBIELLAGE CYLINDRE (ENS.)	1					
2	6EG-E1111-00-1S	HEAD, CYLINDER 1 CULASSE, 1	1					
3	6EE-E1133-10	.GUIDE, VALVE 1 .GUIDE, SOUPAPE 1	2					
4	676-11372-00	.NIPPLE, HOSE .RACCORD, TUYAU	2					
5	90105-08M36	BOLT, FLANGE BOULON, A COLLERETTE	4					
6	93604-12M07	PIN, DOWEL CLAVETTE	2					
7	6EG-E1181-00	GASKET, CYLINDER HEAD 1 JOINT, DE CULASSE 1	1					
8	6EG-E1191-00	COVER, CYLINDER HEAD 1 COUVERCLE, CULASSE 1	1					
9	6EG-E1193-00	GASKET, HEAD COVER 1 JOINT, COUVERCLE DE CULASSE 1	1					
10	90105-06039	BOLT, FLANGE BOULON, A COLLERETTE	6					
11	69M-12411-01	THERMOSTAT THERMOSTAT	1					
12	688-12412-00	.SEAL, THERMOSTAT .JOINT, THERMOSTAT	1					
13	6EG-E2413-00-1S	COVER, THERMOSTAT COUVERCLE, THERMOSTAT	1					
14	6G8-11325-00	ANODE ANODE	1					
15	97880-05025	SCREW, PAN HEAD VIS, TETE TRONCONIQUE	1					
16	67D-12414-A0	GASKET, COVER JOINT, COUVERCLE	1					
17	90119-06MA2	BOLT, WITH WASHER BOULON, AVEC RONDELLE	3					
18	90445-09808	HOSE (L240) DURITE (L240)	1					
19	90464-09013	CLAMP BRIDE	1					
20	90467-09M09	CLIP JONC	2					
21	94702-00372	PLUG, SPARK (NGK CR6HSB) BOUGIE D,ALLUMAGE	1					



VILEBREQUIN & PISTON

4

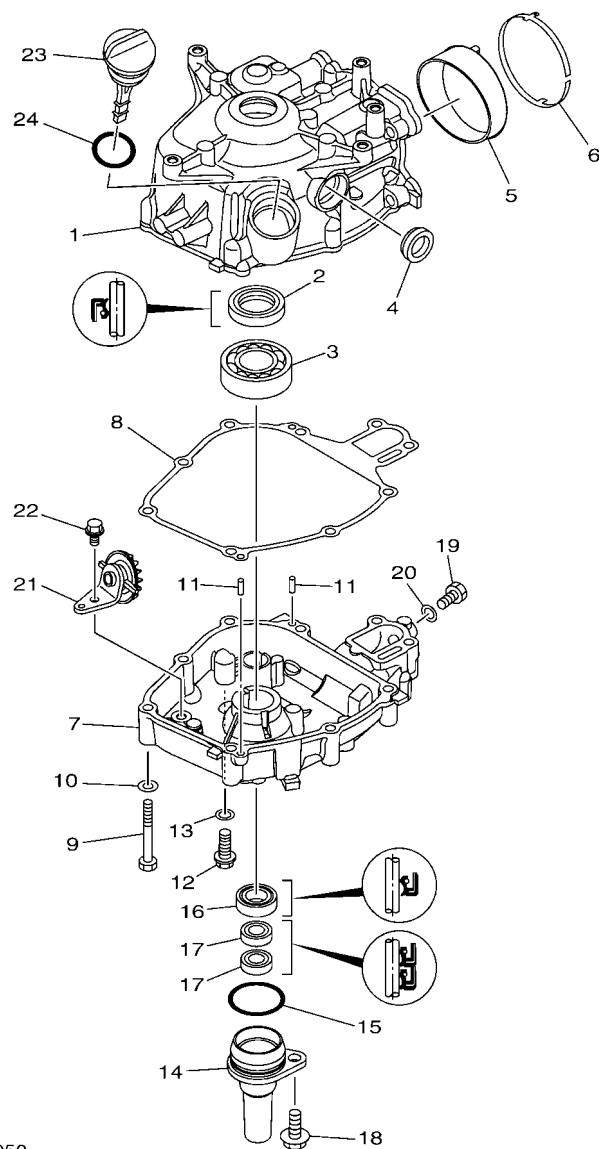

6EG3100-R050

FIG. 5 CYLINDER & CRANKCASE 2

CYLINDRE & CARTER 2

REF. NO.	PART NO. N° PIECES	DESCRIPTION DESCRIPTION	6EG5				REMARKS REMARQUES
1	6EG-E1311-00-1S	CYLINDER 1 CYLINDRE 1	1				
2	93102-20814	OIL SEAL JOINT SPY	1				
3	93306-272Y2	BEARING ROULEMENT	1				
4	3Y6-15361-00	GAUGE, LEVEL JAUGE A HUILE	1				
5	6EG-14664-00	GROMMET, WATER SHUT PASSE-FIL	1				
6	6EG-1246L-00	RING, STOP 1 BAGU, BUTEE 1	1				
7	6EG-E5111-00-1S	CRANKCASE 1 CARTER DE MOTEUR	1				
8	6EG-11351-00	GASKET, CYLINDER JOINT, D'EMBASE	1				
9	97013-06045	BOLT BOULON	9				
10	92903-06600	WASHER, PLATE RONDELLE, PLATE	9				
11	93604-12M07	PIN, DOWEL CLAVETTE	2				
12	90105-08M76	BOLT, FLANGE BOULON, A COLLERETTE	1				
13	90201-08818	WASHER, PLATE RONDELLE, PLATE	1				
14	6EG-E5396-00-CA	HOUSING, OIL SEAL LOGEMENT DE JOINT SPY	1				
15	93210-35803	O-RING JOINT TORIQUE	1				
16	93102-20814	OIL SEAL JOINT SPY	1				
17	93102-09800	OIL SEAL JOINT SPY	2				
18	97E95-08520	BOLT, HEXAGON W/W DEEP RECESS VIS HEXAGONAL AVC RONDELLE	1				
19	97D95-08014	BOLT, HEXAGON DEEP RECESS VIS HEXAGONAL	1				
20	90430-08143	GASKET JOINT	1				
21	6EG-E3102-00	GEAR UNIT ASSY PIGNON	1				
22	95817-06012	BOLT, FLANGE BOULON, A COLLERETTE	1				
23	6EG-E5362-00	PLUG, OIL LEVEL PLOT, NIVEAU D'HUILE	1				
24	93210-24800	O-RING JOINT TORIQUE	1				



SOUPAPE

6


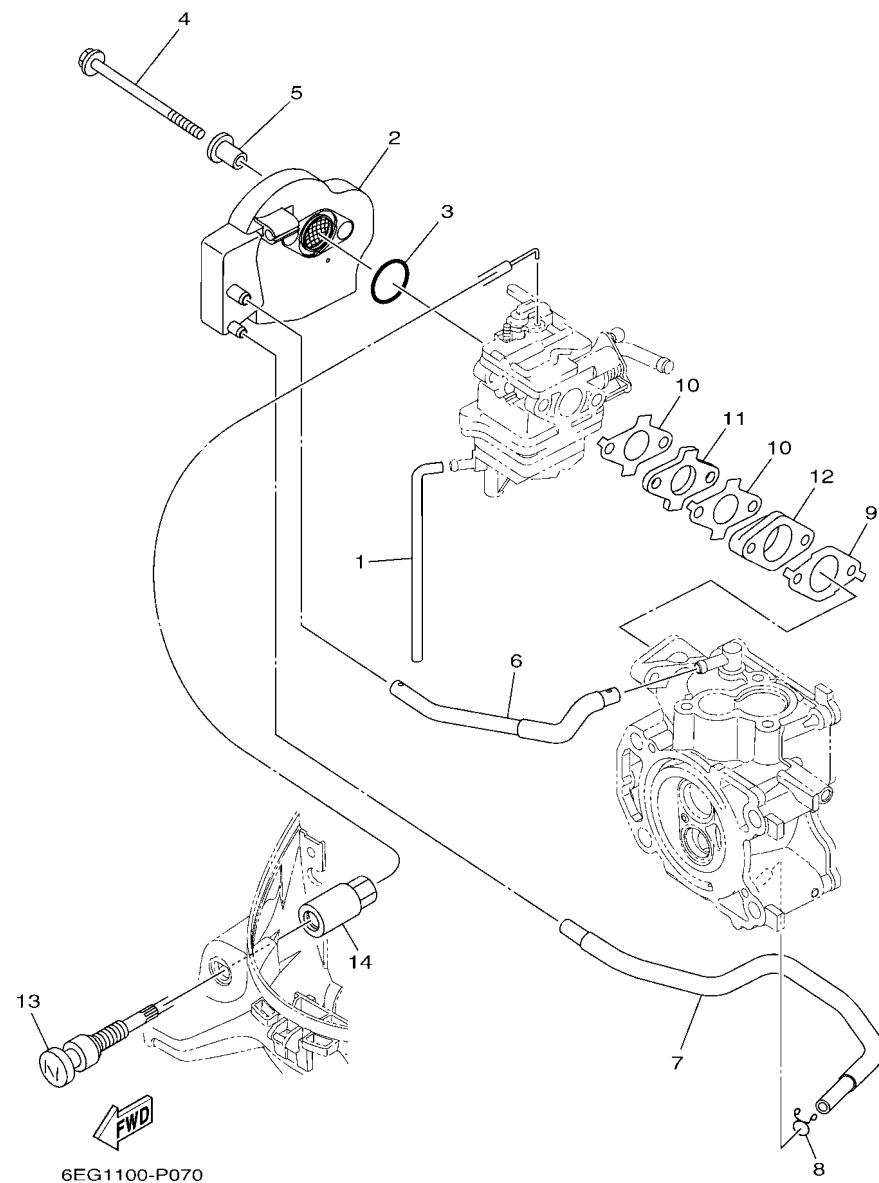


FIG. 7 INTAKE

ADMISSION

REF. NO.	PART NO. N° PIECES	DESCRIPTION DESCRIPTION	6EG5					REMARKS REMARQUES
1	6EG-E4148-00	PIPE DURITE	1					
2	6EG-14440-00	SILENCER ASSY, INTAKE SILENCIEUX D'ADMISSION	1					
3	93210-20801	O-RING JOINT TORIQUE	1					
4	97E95-06585	BOLT, HEXAGON W/W DEEP RECESS VIS HEXAGONAL AVC RONDELLE	2					
5	90387-06076	COLLAR COLLERETTE	2					
6	6EG-E2483-00	PIPE 3 DURITE 3	1					
7	6EG-E316F-00	HOSE, OIL 1 DURITE A HUILE 1	1					
8	90467-09M09	CLIP JONC	1					
9	6EG-E3645-00	GASKET, MANIFOLD 1 JOINT, TUBULURE 1	1					
10	6EG-E3646-00	GASKET, MANIFOLD 2 JOINT, TUBULURE 2	2					
11	6EG-E3647-00	GASKET, MANIFOLD 3 JOINT, TUBULURE 3	1					
12	6EG-E3641-00	MANIFOLD, INTAKE 1 TUBULURE, ADMISSION 1	1					
13	6EG-F6330-00	STARTER CABLE ASSY CABLE DE STARTER	1					
14	90179-11800	NUT ECROU	1					

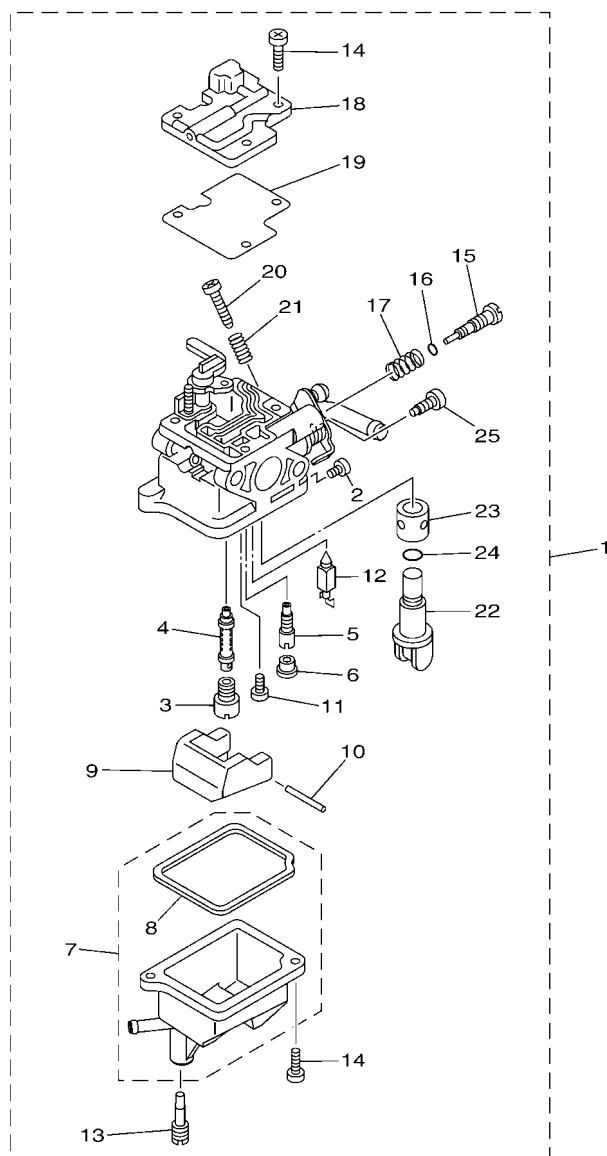

6EG1300-P080

FIG. 8 CARBURETOR

CARBURATEUR

REF. NO.	PART NO. N° PIECES	DESCRIPTION DESCRIPTION	6EG5				REMARKS REMARQUES
1	6EG-14301-00	CARBURETOR ASSY 1 CARBURATEUR COMPLET 1	1				
2	97890-04007	.SCREW, PAN HEAD .VIS, CRUCIFORME	1				
3	6EG-14343-3A	.JET, MAIN (#61) .GICLEUR, PRINCIPAL (#61)	1				
4	69M-14341-00	.NOZZLE, MAIN .PUITS D'AIGUILLE	1				
5	69M-14342-68	.JET, PILOT (#37) .GICLEUR, RALENTI (#37)	1				
6	69M-14966-00	.BUSH .BAGUE	1				
7	6EG-14381-00	.BODY, FLOAT CHAMBER .CORPS, CUVE DE FLOTTEUR	1				
8	69M-14984-00	.GASKET, FLOAT CHAMBER .JOINT, CUVE DE FLOTTEUR	1				
9	69M-14385-00	.FLOAT .FLOTTEUR	1				
10	6A1-14386-00	.PIN, FLOAT .AXE, FLOTTEUR	1				
11	98580-03005	.SCREW, PAN HEAD .VIS	1				
12	62Y-14392-00	.VALVE, NEEDLE .POINTEAU	1				
13	69M-14991-00	.SCREW .VIS	1				
14	98580-04010	.SCREW, PAN HEAD .VIS	5				
15	69M-14323-20	.SCREW, AIR ADJUSTING .VIS DE DOSEUR D'AIR	1				
16	2T4-14397-00	.O-RING .JOINT TORIQUE	1				
17	62Y-14334-00	.SPRING, AIR ADJUSTING .RESSORT, VIS DE DOSEUR D'AIR	1				
18	69M-14527-00	.PLATE .PLAQUE	1				
19	69M-14536-00	.GASKET .JOINT	1				
20	69W-14321-00	.SCREW, THROTTLE .VIS, ACCELERATEUR	1				
21	62Y-14212-00	.SPRING, PILOT ADJUSTING .RESSORT, VIS DE RALENTI	1				
22	69M-24524-00	.LEVER, COCK .LEVIER, ROBINET	1				
23	69M-24523-00	.VALVE .SOUPAPE	1				
24	69M-24533-00	.O-RING .JOINT TORIQUE	1				
25	69M-24535-00	.SCREW, LEVER FITTING .VIS, FIXATION DE LEVIER	1				

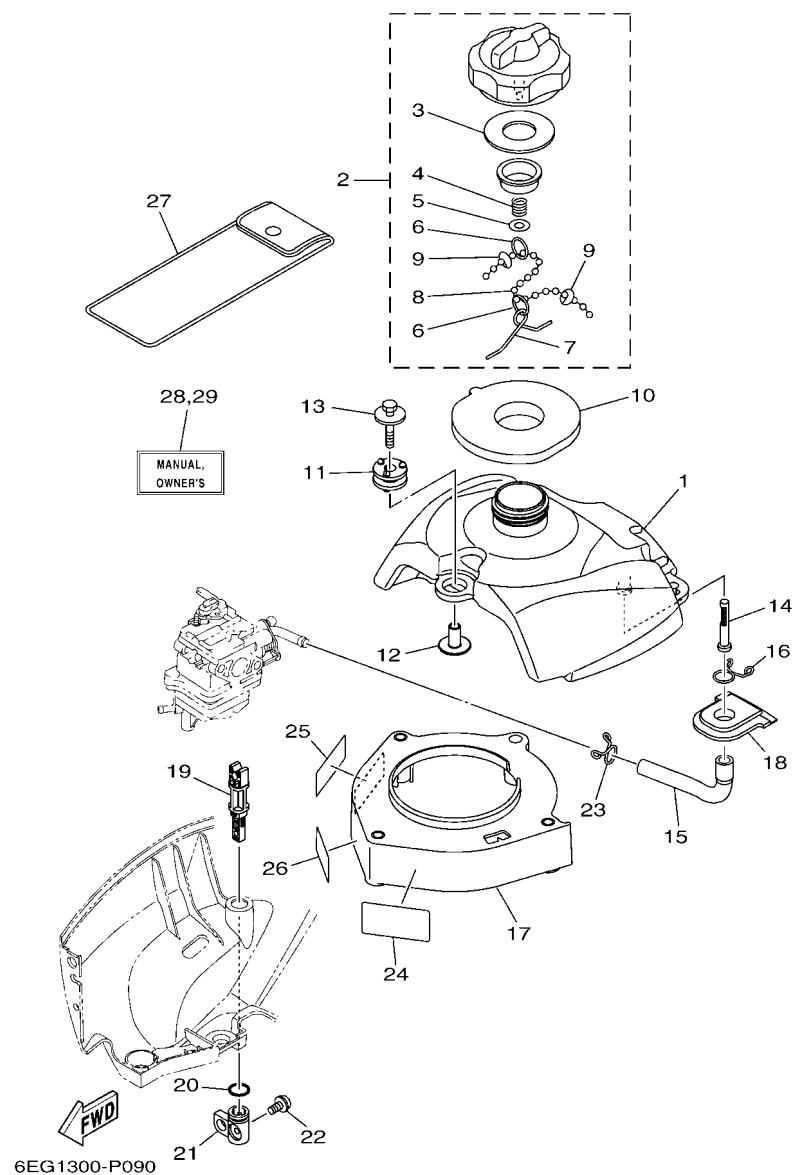


FIG. 9 FUEL

CARBURANT

REF. NO.	PART NO. N° PIECES	DESCRIPTION DESCRIPTION	6EG5					REMARKS REMARQUES
1	6EG-F4111-00	TANK, FUEL RESERVOIR, A ESSENCE	1					
2	68D-24610-10	CAP ASSY BOUCHON	1					
3	68D-24612-00	.PACKING, CAP .JOINT, BOUCHON	1					
4	90501-100A5	.SPRING, COMPRESSION .RESSORT, COMPRESSION	1					
5	92990-04200	.WASHER, PLAIN .RONDELLE, PLATE	1					
6	90468-100A0	.CLIP .JONC	2					
7	624-24634-00	.HOOK, CHAIN BALL .ATTACHE	1					
8	69M-24633-01	.CHAIN, BALL .CHANE DE BALLE	1					
9	67D-21757-00	.WASHER, SPECIAL 1 .RONDELLE, SPECIALE 1	2					
10	6EG-24641-00	GASKET, CAP 1 JOINT 1, BOUCHON	1					
11	6EG-F4375-00	GROMMET OEILLET CAOUTCHOUC	3					
12	90387-06176	COLLAR COLLERETTE	3					
13	90119-06098	BOLT, WITH WASHER BOULON, AVEC RONDELLE	3					
14	6L5-24251-00	STRAINER 1 FILTRE 1	1					
15	6EG-F4311-00	PIPE, FUEL 1 DURITE A ESSENCE	1					
16	90467-13M13	CLIP JONC	1					
17	6EG-F4191-00	BRACKET, FUEL TANK 1 SUPPORT 1, RESERVOIR A ESSENCE	1					
18	6EG-F4181-00	DAMPER, LOCATING 1 SILENT-BLOC 1	1					
19	6EG-F4554-00	SHAFT, COCK AXE, MANETTE DU ROBINET	1					
20	93210-128F6	O-RING JOINT TORIQUE	1					
21	6EG-F4575-00	LEVER, FUEL CHANGE LEVIER, D'ESSENCE	1					
22	90159-05M12	SCREW, WITH WASHER VIS, AVEC RONDELLE	1					
23	90467-11M08	CLIP JONC	1					
24	6EG-E3437-61	MARK, CAUTION MAKER	1					
25	6EE-H1994-40	LABEL, SAFETY ETIQUETTE, SECURITE	1					
26	6EE-H1994-50	LABEL, SAFETY ETIQUETTE, SECURITE	1					
27	6EE-F8100-00	TOOL KIT TROUSSE A OUTILS	1					AP AP

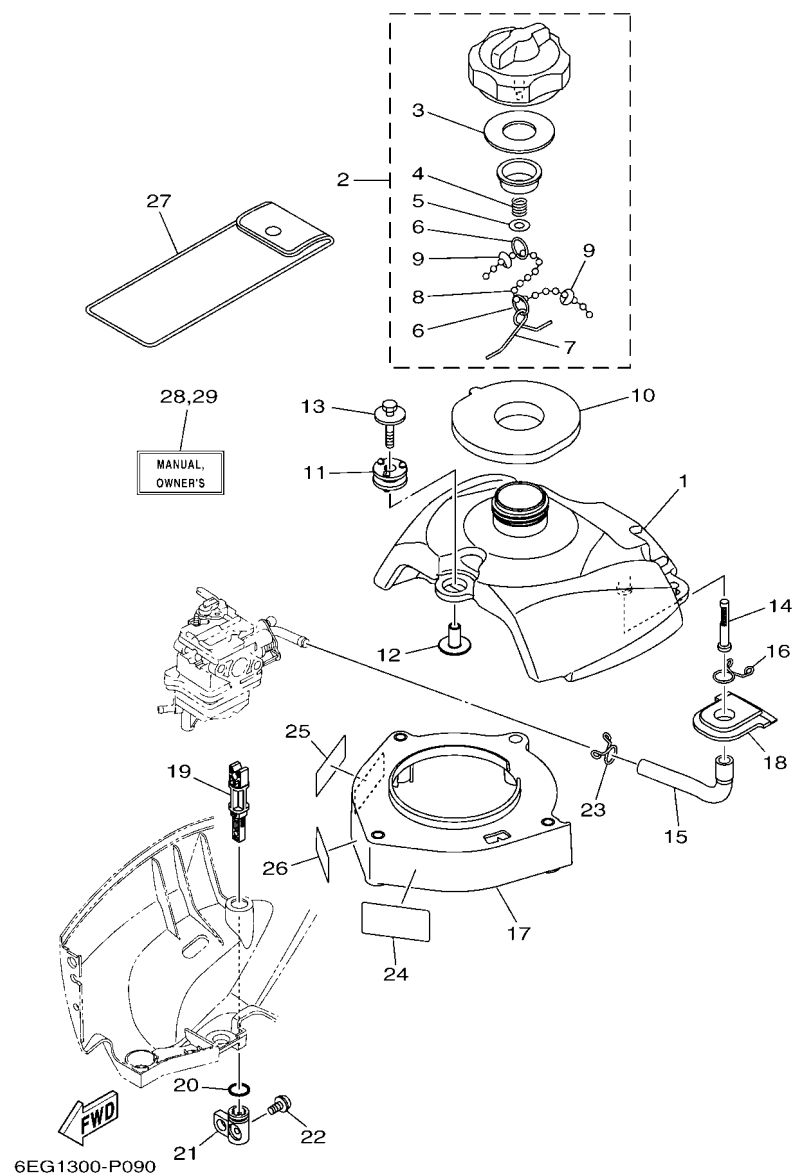


FIG. 9 FUEL

CARBURANT

REF. NO.	PART NO. N° PIECES	DESCRIPTION DESCRIPTION	6EG5				REMARKS REMARQUES
28	6EG-F8199-73-E0	MANUAL,OWNER'S	1				UR (E)
	6EG-F8199-73-F0	MANUEL D'UTILISATION	1				UR (E)
	6EG-F8199-73-F0	MANUEL D'UTILISATION	1				UR (F)
	6EG-F8199-73-S0	MANUEL D'UTILISATION	1				UR (F)
	6EG-F8199-73-S0	MANUEL D'UTILISATION	1				UR (ES)
	6EG-F8199-73-G0	MANUEL D'UTILISATION	1				UR (ES)
	6EG-F8199-73-G0	MANUEL D'UTILISATION	1				UR (D)
	6EG-F8199-73-D0	MANUEL D'UTILISATION	1				UR (D)
	6EG-F8199-73-D0	MANUEL D'UTILISATION	1				UR (NL)
	6EG-F8199-73-D0	MANUEL D'UTILISATION	1				UR (NL)
	6EG-F8199-73-H0	MANUEL D'UTILISATION	1				UR (I)
	6EG-F8199-73-H0	MANUEL D'UTILISATION	1				UR (I)
29	6EG-F8199-83-K0	MANUEL D'UTILISATION	1				UR (DK)
	6EG-F8199-83-K0	MANUEL D'UTILISATION	1				UR (DK)
	6EG-F8199-83-R0	MANUEL D'UTILISATION	1				UR (GR)
	6EG-F8199-83-R0	MANUEL D'UTILISATION	1				UR (GR)
	6EG-F8199-83-P0	MANUEL D'UTILISATION	1				UR (P)
	6EG-F8199-83-P0	MANUEL D'UTILISATION	1				UR (P)
	6EG-F8199-83-N0	MANUEL D'UTILISATION	1				UR (N)
	6EG-F8199-83-N0	MANUEL D'UTILISATION	1				UR (N)
	6EG-F8199-83-M0	MANUEL D'UTILISATION	1				UR (S)
	6EG-F8199-83-M0	MANUEL D'UTILISATION	1				UR (S)
	6EG-F8199-83-L0	MANUEL D'UTILISATION	1				UR (SF)
	6EG-F8199-83-L0	MANUEL D'UTILISATION	1				UR (SF)


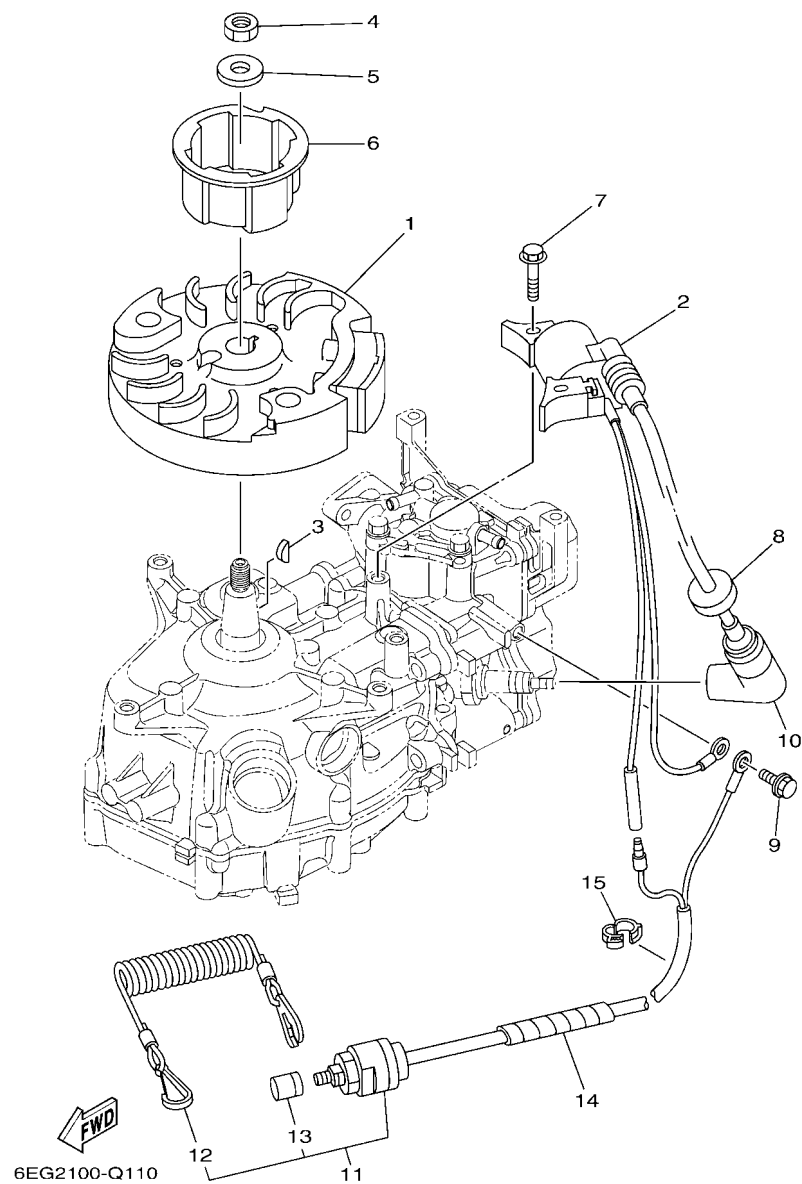


FIG. 11 GENERATOR

GENERATRICE

[illegible]

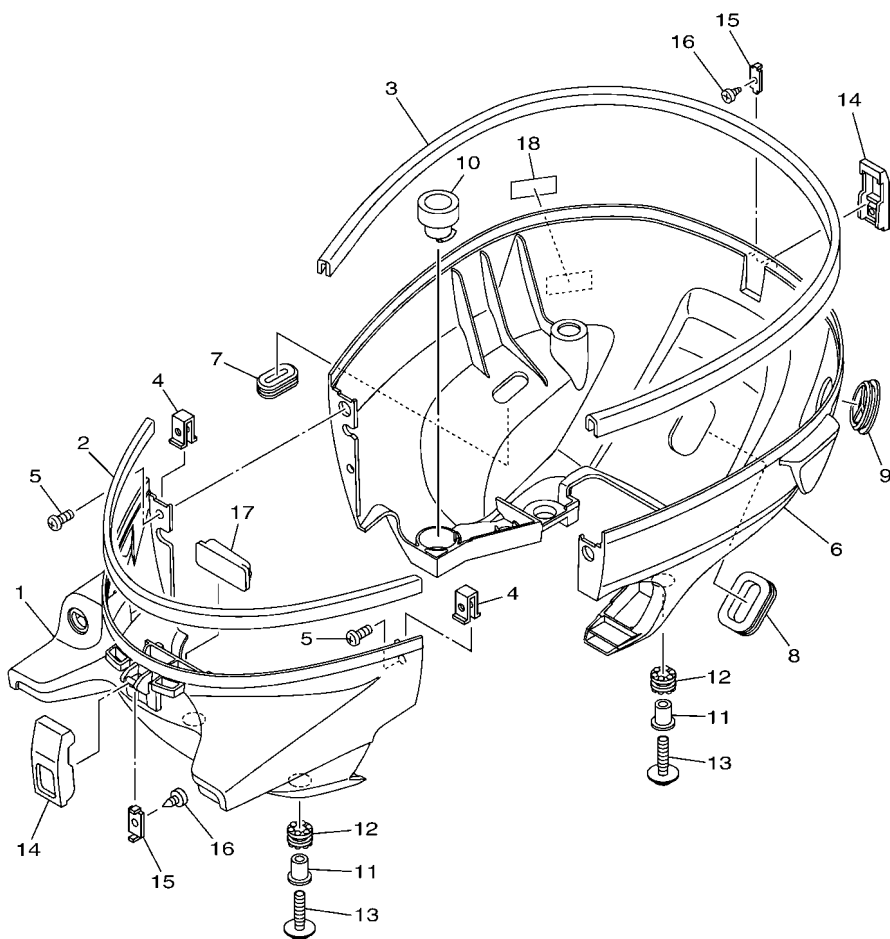

6EG1100-P120

FIG. 12 BOTTOM COWLING

CAPOT INFERIEUR

REF. NO.	PART NO. N° PIECES	DESCRIPTION DESCRIPTION	6EG5				REMARKS REMARQUES
1	6EG-G2711-01	COWLING, BOTTOM 1 CUVETTE 1	1				
2	6EG-42628-00	SEAL JOINT	1				
3	6EG-42629-00	SEAL JOINT	1				
4	6EG-G2774-00	STAY, APRON 1 COUSSINET	2				
5	90157-05013	SCREW, PAN HEAD VIS, TETE TRONCONIQUE	2				
6	6EG-G2712-01	COWLING, BOTTOM 2 CUVETTE 2	1				
7	6EG-G2727-00	GROMMET PASSE-FIL	1				
8	6EG-G2724-00	GROMMET PASSE-FIL	1				
9	647-45151-01	COVER, UPPER CASING CAPUCHON, FOURREAU	1				
10	6EG-E5316-00	DAMPER 1 AMORTISSEUR 1	1				
11	90387-068N9	COLLAR COLLERETTE	4				
12	6EG-G2768-00	DAMPER AMORTISSEUR	4				
13	90119-06M17	BOLT, WITH WASHER BOULON, AVEC RONDELLE	4				
14	6L5-42647-00	HOLDER, CLAMP BAND SUPPORT, SANDOW DE SERRAGE	2				
15	6EG-G2823-00	PLATE, STOP PLAQUE	2				
16	90167-03M02	SCREW, TAPPING VIS, TETE FRAISEE	2				
17	6EG-G4532-00	STOPPER, UPPER MOUNT PLAQUETTE	1				
18	6EG-F4591-00	EMBLEM, FUEL COCK ADHESIF	1				

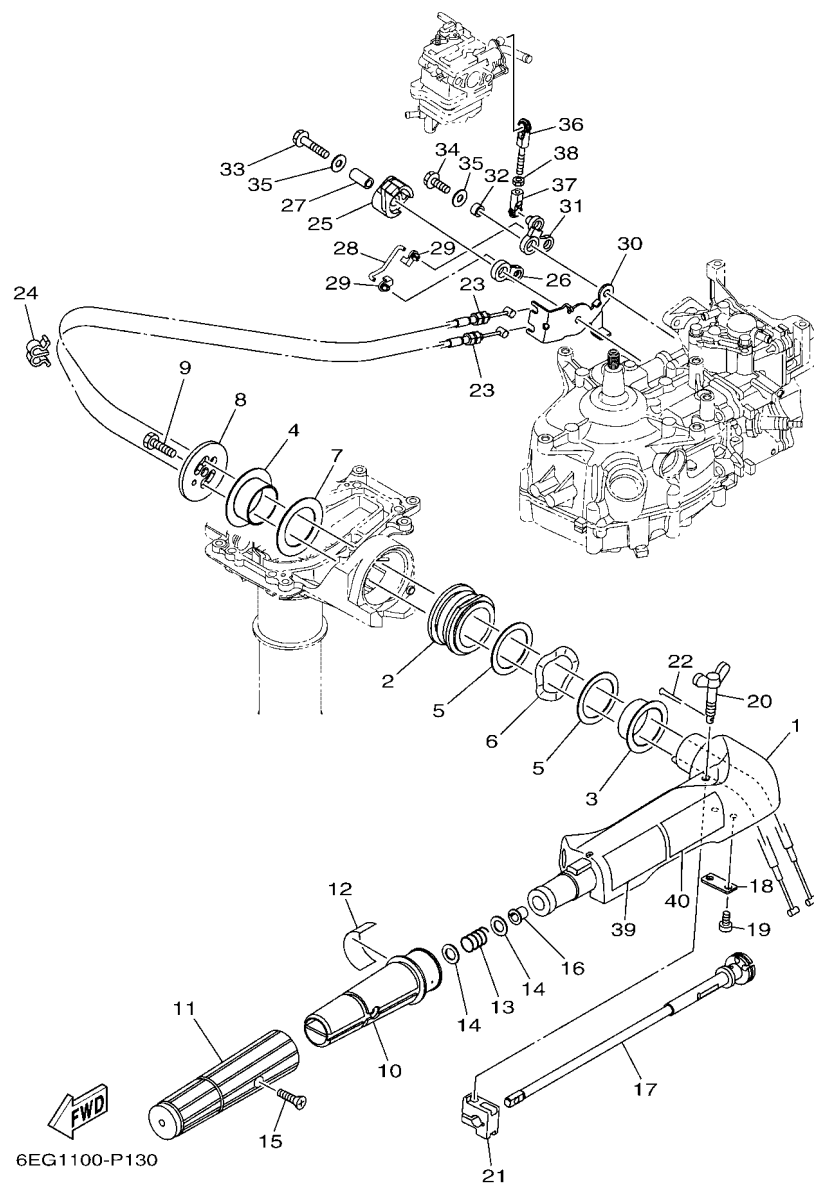


FIG. 13 STEERING

DIRECTION

REF. NO.	PART NO. N° PIECES	DESCRIPTION DESCRIPTION	6EG5				REMARKS REMARQUES
1	6EG-G2111-00-8D	HANDLE, STEERING POIGNEE	1				
2	6BX-42129-00	BUSHING, RUBBER DOUILLE, CAOUTCHOUC	1				
3	6EE-G2171-00	BUSHING COUSSINET	1				
4	6EE-G2172-00	BUSHING 2 DOUILLE 2	1				
5	6EE-G2181-00	WASHER RONDELLE	2				
6	6EE-G2188-00	WASHER, WAVE RONDELLE, ONDULEE	1				
7	6EE-G2182-00	WASHER 2 RONDELLE 2	1				
8	6EE-G2131-00	COVER, HANDLE STEERING COUVERCLE	1				
9	97D75-08025	BOLT, HEXAGON DEEP RECESS VIS HEXAGONAL	1				
10	6EG-G2119-00	GRIP, STEERING HANDLE POIGNEE, BARRE FRANCHE	1				
11	6EG-G2177-00	RUBBER, HANDLE CAOUTCHOUC, POIGNEE	1				
12	6EG-G2137-00	INDICATOR, THROTTLE INDICATEUR, ACCELERATION	1				
13	90501-23215	SPRING, COMPRESSION RESSORT, COMPRESSION	1				
14	90201-10M02	WASHER, PLATE RONDELLE, PLATE	2				
15	90152-05011	SCREW, COUNTERSUNK VIS, TETE NOYEE	1				
16	90386-08032	BUSH DOUILLE	1				
17	6EG-G2138-00	LEVER, THROTTLE LEVIER, ACCELERATEUR	1				
18	6EE-G2159-00	STAY SUPPORT	1				
19	97885-05012	SCREW, PAN HEAD VIS, A ENCOCHE	2				
20	6G1-42125-01	BOLT, FRICTION ADJUSTING BOULON	1				
21	6EE-G2126-00	FRICTION, STEERING HANDLE GRIP CUVETTE, POIGNEE DE DIRECTION	1				
22	91490-16010	PIN, COTTER GOUPILLE	1				
23	6EG-F6301-00	THROTTLE CABLE ASSY CABLE D'ACCELERATEUR	2				
24	90464-07M20	CLAMP BRIDE	1				
25	6EE-G1638-00	PULLEY POULIE	1				
26	6EG-G1283-00	LEVER, FREE ACCEL. LEVIER	1				
27	90387-06252	COLLAR COLLERETTE	1				

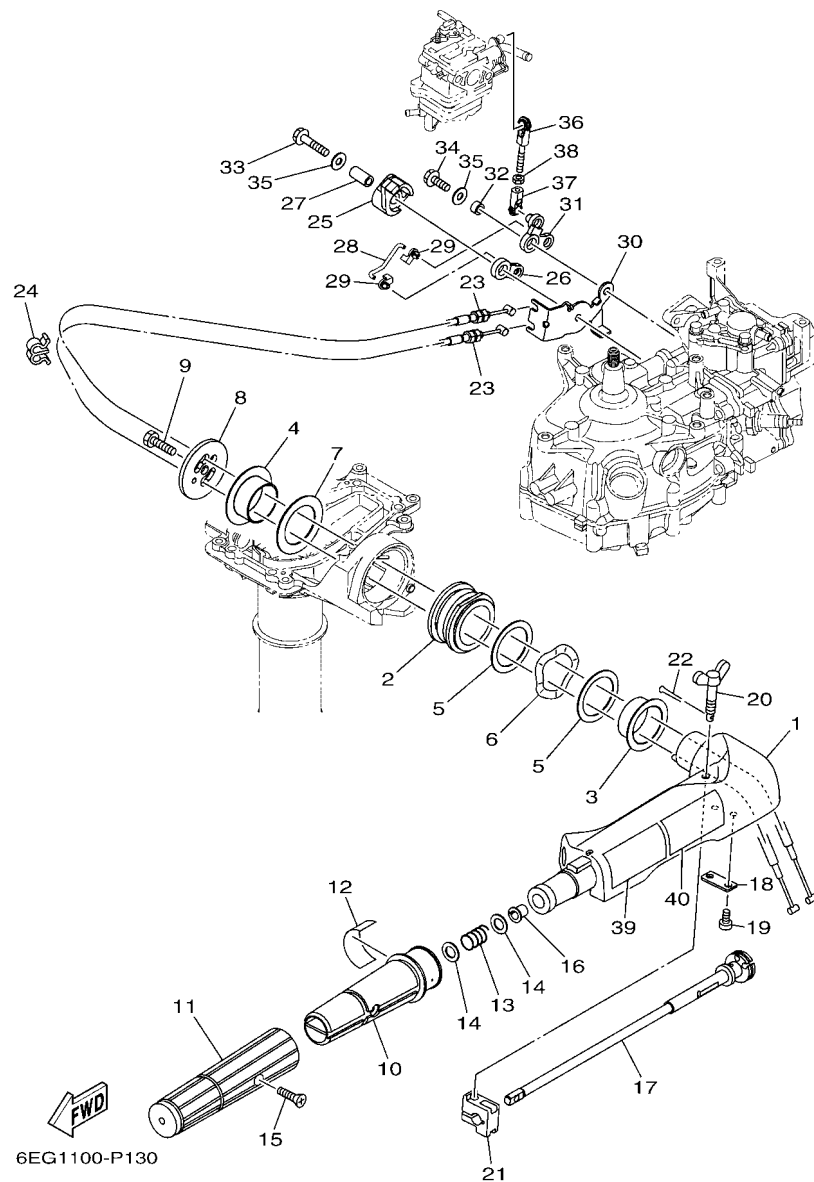


FIG. 13 STEERING


DIRECTION

REF. NO.	PART NO. N° PIECES	DESCRIPTION DESCRIPTION	6EG5				REMARKS REMARQUES
28	6EG-G1211-00	LINK, ACCEL. BIELLETTTE, ACCELERATION	1				
29	661-41262-02	JOINT, CHOKE LEVER RACCORD, LEVIER DE STARTER	2				
30	6EG-E4497-00	STAY, THROTTLE WIRE SUPPORT DE BOISSEAU	1				
31	6EG-G1284-00	LEVER, FREE AXLE 2 LEVIVER, ARBRE 2	1				
32	90387-06M24	COLLAR COLLERETTE	1				
33	97E95-06535	BOLT, HEXAGON W/W DEEP RECESS VIS HEXAGONAL AVC RONDELLE	1				
34	97E95-06520	BOLT, HEXAGON W/W DEEP RECESS VIS HEXAGONAL AVC RONDELLE	1				
35	90201-06M62	WASHER, PLATE RONDELLE, PLATE	2				
36	682-41237-50	JOINT, LINK RACCORD	1				
37	6H1-41237-00	JOINT, LINK RACCORD	1				
38	95380-05600	NUT ECROU	1				
39	6EF-G2794-40	LABEL, WARNING (GENERAL) ETIQUETTE, AVERTISSEMENT	1				
40	6EF-G2794-50	LABEL, WARNING (GENERAL) ETIQUETTE, AVERTISSEMENT	1				



COMMANDE

16

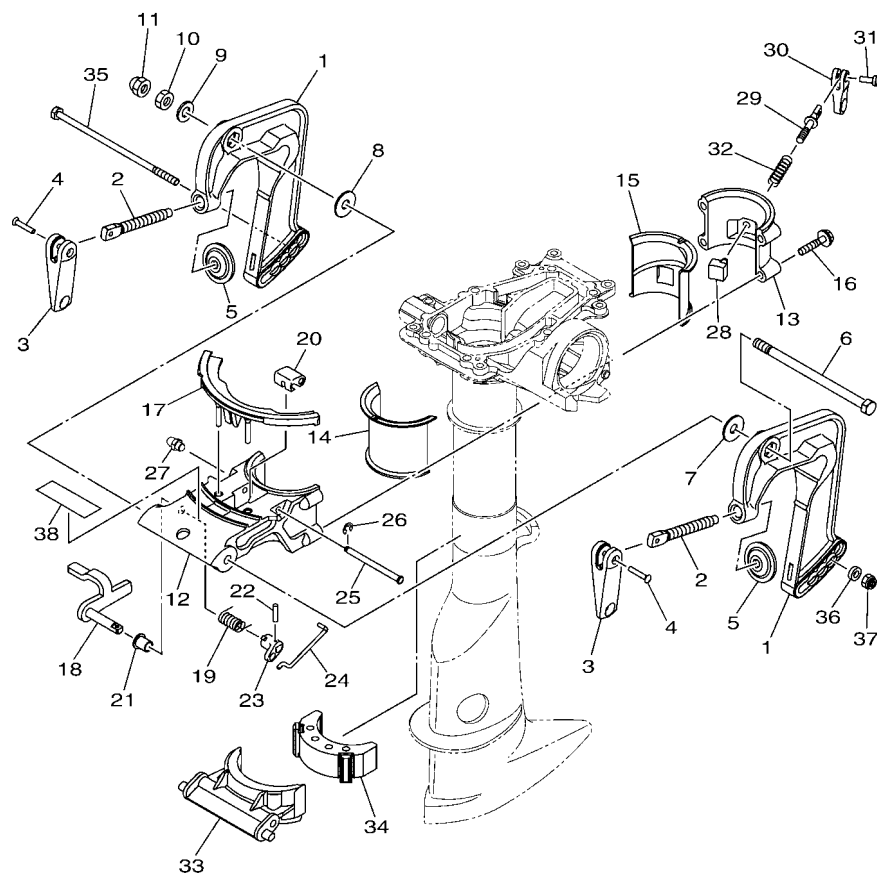

6EG3100-R150

FIG. 15 BRACKET

SUPPORT

REF. NO.	PART NO. N° PIECES	DESCRIPTION DESCRIPTION	6EG5				REMARKS REMARQUES
1	6EG-G3111-00-8D	BRACKET, CLAMP 1 PRESSE 1	2				
2	6E0-43116-01	SCREW, TRANSOM CLAMP VIS DE PRESSE	2				
3	6EE-G3118-00	HANDLE, TRANSOM CLAMP POIGNEE DE VIS DE PRESSE	2				
4	90243-04M01	PIN GOUPILLE	2				
5	648-43114-01	PAD, TRANSOM CLAMP RONDELLE D'APPUI	2				
6	90101-08M07	BOLT BOULON	1				
7	90202-08022	WASHER, PLATE RONDELLE, PLATE	1				
8	90202-08004	WASHER, PLATE RONDELLE, PLATE	1				
9	92990-08200	WASHER, PLAIN RONDELLE, PLATE	1				
10	95380-08600	NUT ECROU	1				
11	95380-08800	NUT, CROWN ECROU, BORGNE	1				
12	6EG-G3311-00-8D	BRACKET, SWIVEL 1 SUPPORT, PIVOT 1	1				
13	6EG-G3312-00-8D	BRACKET, SWIVEL 2 SUPPORT, PIVOT 2	1				
14	6EG-G2537-00	BUSHING, PIVOT SHAFT COUSSINET	1				
15	6EG-G2538-00	BUSHING, PIVOT SHAFT COUSSINET	1				
16	97E75-06530	BOLT, HEXAGON W/W DEEP RECESS VIS HEXAGONAL AVC RONDELLE	4				
17	6EG-G3679-00	COVER COUVERCLE	1				
18	6EG-G3180-00	TILT STOP LEVER ASSY LEVIER, VERROUILLAGE RELEVAGE	1				
19	6EG-G3188-00	SPRING RESSORT	1				
20	6EG-G3186-00	LEVER LEVIER	1				
21	90386-08032	BUSH DOUILLE	1				
22	91690-20010	PIN, SPRING AGRAFFE	1				
23	6EG-G3185-00	LEVER, TILT STOP 2 LEVIER VERROUILLAGE RELEVAGE 2	1				
24	6EG-G3164-00	ROD, TILT LOCK TIGE	1				
25	6EG-G3166-00	PIN GOUPILLE	1				
26	99080-04600	CIRCLIP CIRCLIP	1				
27	93700-06M03	NIPPLE, GREASE PION	1				



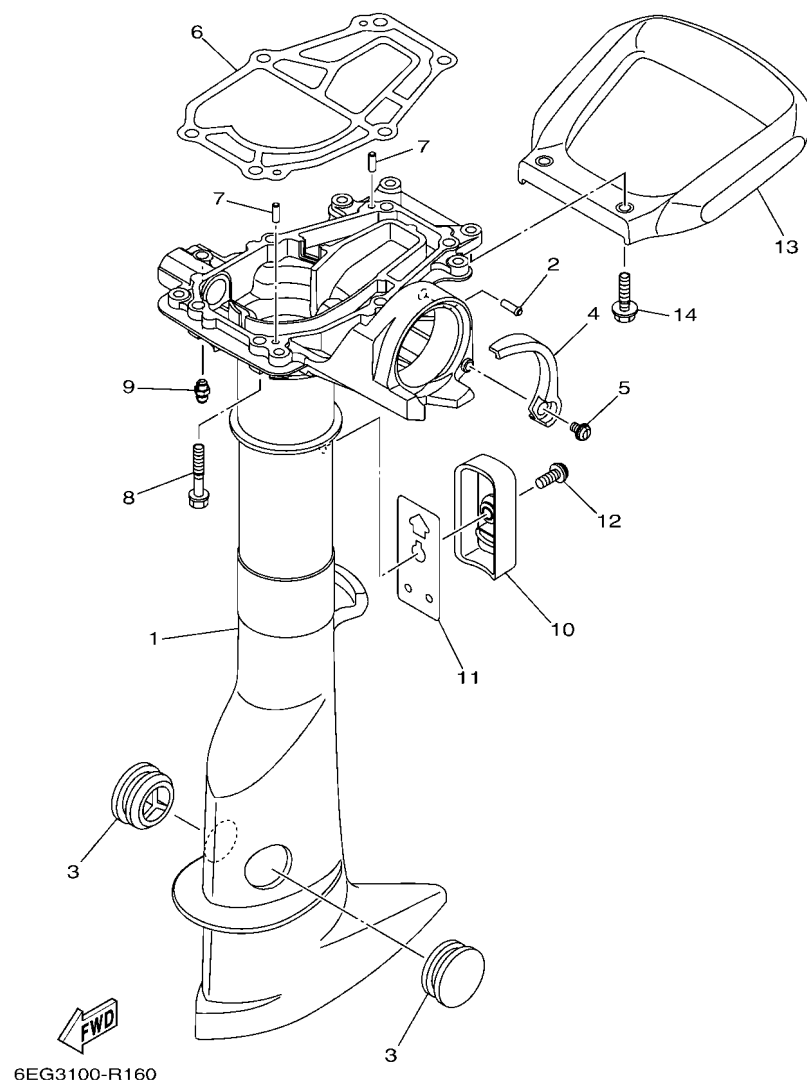


FIG. 16 UPPER CASING

FOURREAU

[illegible]

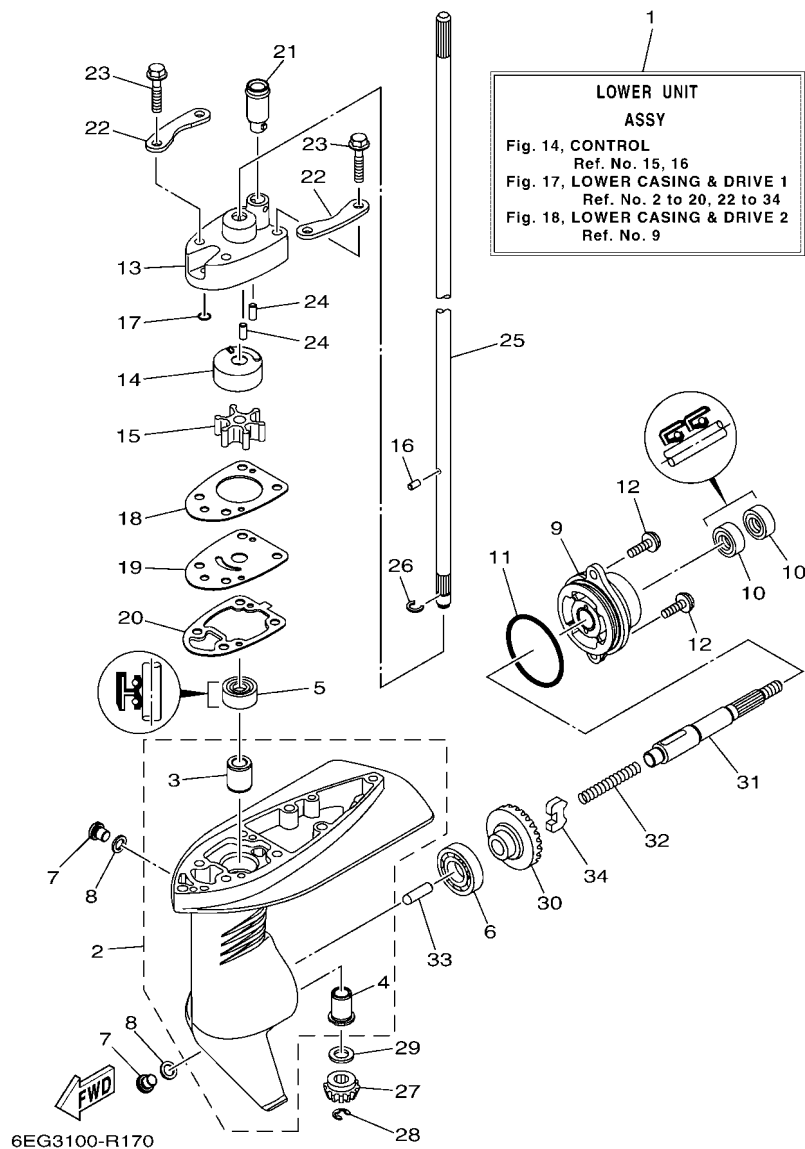


FIG. 17 LOWER CASING & DRIVE 1

BOITIER D'HELICE TRANSMISSION1

REF. NO.	PART NO. N° PIECES	DESCRIPTION DESCRIPTION	6EG5				REMARKS REMARQUES
1	6EG-G5300-01-8D	LOWER UNIT ASSY UNITE INFERIEURE (ENS.)	1				S(17.0") S(17.0")
	6EG-G5300-11-8D	LOWER UNIT ASSY UNITE INFERIEURE (ENS.)	1				L(22.0") L(22.0")
2	6EG-G5311-00-8D	CASING, LOWER BOITIER D'HELICE	1				
3	6L5-45316-09	.BUSHING, DRIVE SHAFT .DOUILLE, ARBRE MOTEUR	1				
4	6L5-45317-09	.BUSHING, DRIVE SHAFT .DOUILLE, ARBRE MOTEUR	1				
5	93103-09800	OIL SEAL JOINT SPY	1				
6	93316-003Y0	BEARING ROULEMENT	1				
7	90340-08002	PLUG, STRAIGHT SCREW PLOT, FILETE DROIT	2				
8	90430-08003	GASKET JOINT	2				
9	6EG-G5361-00-8D	CAP, LOWER CASING COUVERCLE, BOITIER D'HELICE	1				
10	93101-13800	OIL SEAL JOINT SPY	2				
11	93210-48800	O-RING JOINT TORIQUE	1				
12	97E95-06516	BOLT, HEXAGON W/W DEEP RECESS VIS HEXAGONAL AVC RONDELLE	2				
13	6EG-G4311-00	HOUSING, WATER PUMP CORPS, POMPE A EAU	1				
14	6EG-G4322-00	INSERT, CARTRIDGE CUVETTE	1				
15	6L5-44352-00	IMPELLER TURBINE	1				
16	93604-07M13	PIN, DOWEL CLAVETTE	1				
17	93210-05001	O-RING JOINT TORIQUE	1				
18	6EG-G4315-00	GASKET, WATER PUMP JOINT, POMPE A EAU	1				
19	6EG-G4323-00	OUTER PLATE, CARTRIDGE PLAQUE EXTERIEURE	1				
20	6EG-G5315-00	PACKING, LOWER CASING JOINT, BOITIER D'HELICE	1				
21	6EE-G4366-00	DAMPER, WATER SEAL 2 JOINT, TUBE D'EAU 2	1				
22	6EG-G4328-00	PLATE PLAQUETTE	2				
23	97E95-06535	BOLT, HEXAGON W/W DEEP RECESS VIS HEXAGONAL AVC RONDELLE	4				
24	93604-12M07	PIN, DOWEL CLAVETTE	2				
25	6EG-G5511-00	SHAFT, DRIVE ARBRE, MOTEUR	1				S(17.0") S(17.0")
	6EG-G5511-10	SHAFT, DRIVE ARBRE, MOTEUR	1				L(22.0") L(22.0")

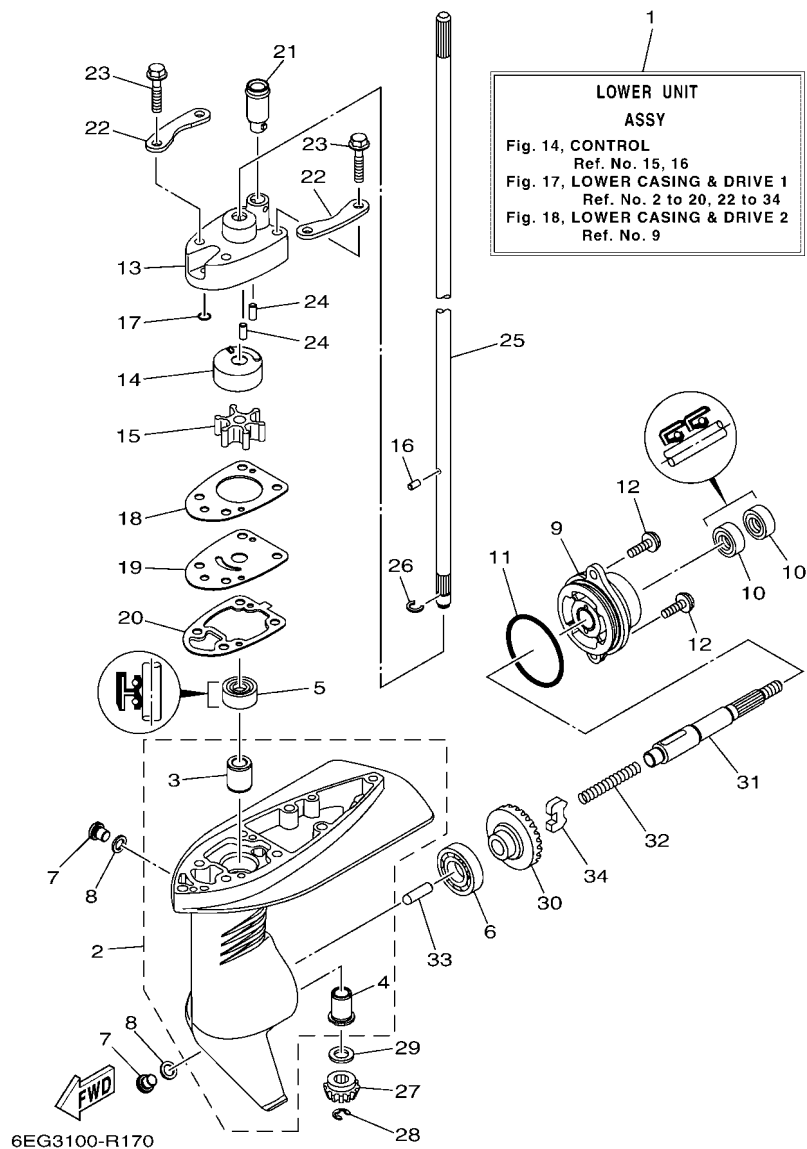


FIG. 17 LOWER CASING & DRIVE 1

BOITIER D'HELICE TRANSMISSION1

[illegible]

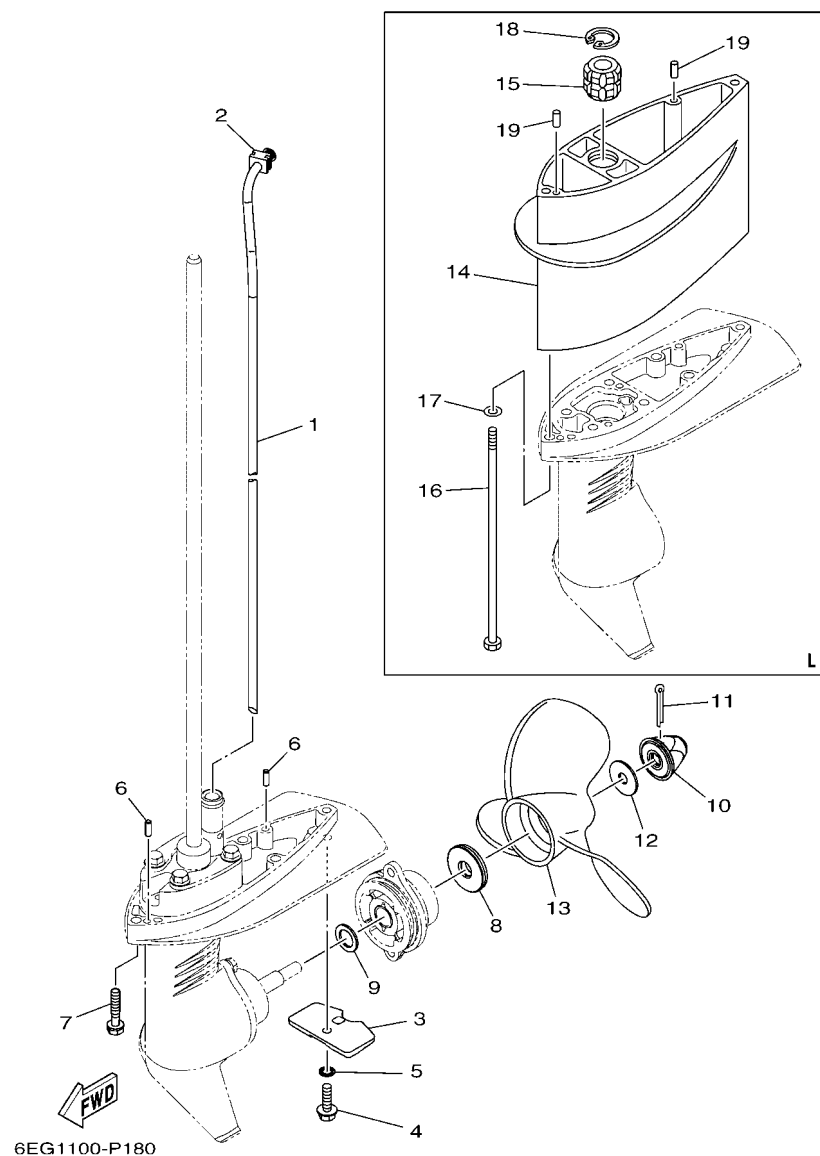


FIG. 18 LOWER CASING & DRIVE 2

BOITIER D'HELICE TRANSMISSION2

REF. NO.	PART NO. N° PIECES	DESCRIPTION DESCRIPTION	6EG5				REMARKS REMARQUES
1	6EG-44361-00	TUBE, WATER 1 TUBE D'EAU 1	1				S(17.0") S(17.0")
	6EG-44361-10	TUBE, WATER 1 TUBE D'EAU 1	1				L(22.0") L(22.0")
2	6EE-G4365-00	DAMPER, WATER SEAL 1 JOINT, TUBE D'EAU 1	1				
3	6L5-45251-03	ANODE ANODE	1				
4	95D95-06012	BOLT, FLANGE DEEP RECESS BOULON FIXATION	1				
5	92990-06300	WASHER, INTERNAL TOOTH RONDELLE, DENTURE INTERNE	1				
6	93604-12M07	PIN, DOWEL CLAVETTE	2				
7	97E95-06530	BOLT, HEXAGON W/W DEEP RECESS VIS HEXAGONAL AVC RONDELLE	3				S(17.0") S(17.0")
8	6EE-G5987-00	SPACER 1 ENTRETOISE 1	1				
9	90201-13198	WASHER, PLATE RONDELLE, PLATE	1				
10	6EE-G5616-00	NUT, PROPELLER CONE, HELICE	1				
11	91490-25030	PIN, COTTER GOUPILLE	1				
12	90201-08M54	WASHER, PLATE RONDELLE, PLATE	1				
13	6L5-45949-00	PROPELLER (3X7-1/4"X5"-BS) HELICE (3X7-1/4"X5"-BS)	1				UR
	6L5-45943-00	PROPELLER (3X7-1/4"X6"-BS) HELICE (3X7-1/4"X6"-BS)	1				UR UR UR
14	6EG-G5211-00-8D	EXTENSION EXTENSION	1				L(22.0") L(22.0")
15	6L5-45318-00	BUSHING, DRIVE SHAFT DOUILLE, ARBRE MOTEUR	1				L(22.0") L(22.0")
16	90101-06M18	BOLT BOULON	3				L(22.0") L(22.0")
17	92990-06600	WASHER, PLATE RONDELLE, PLATE	3				L(22.0") L(22.0")
18	93420-22M03	CIRCLIP CIRCLIP, TYPE S	1				L(22.0") L(22.0")
19	93604-12M07	PIN, DOWEL CLAVETTE	2				L(22.0") L(22.0")


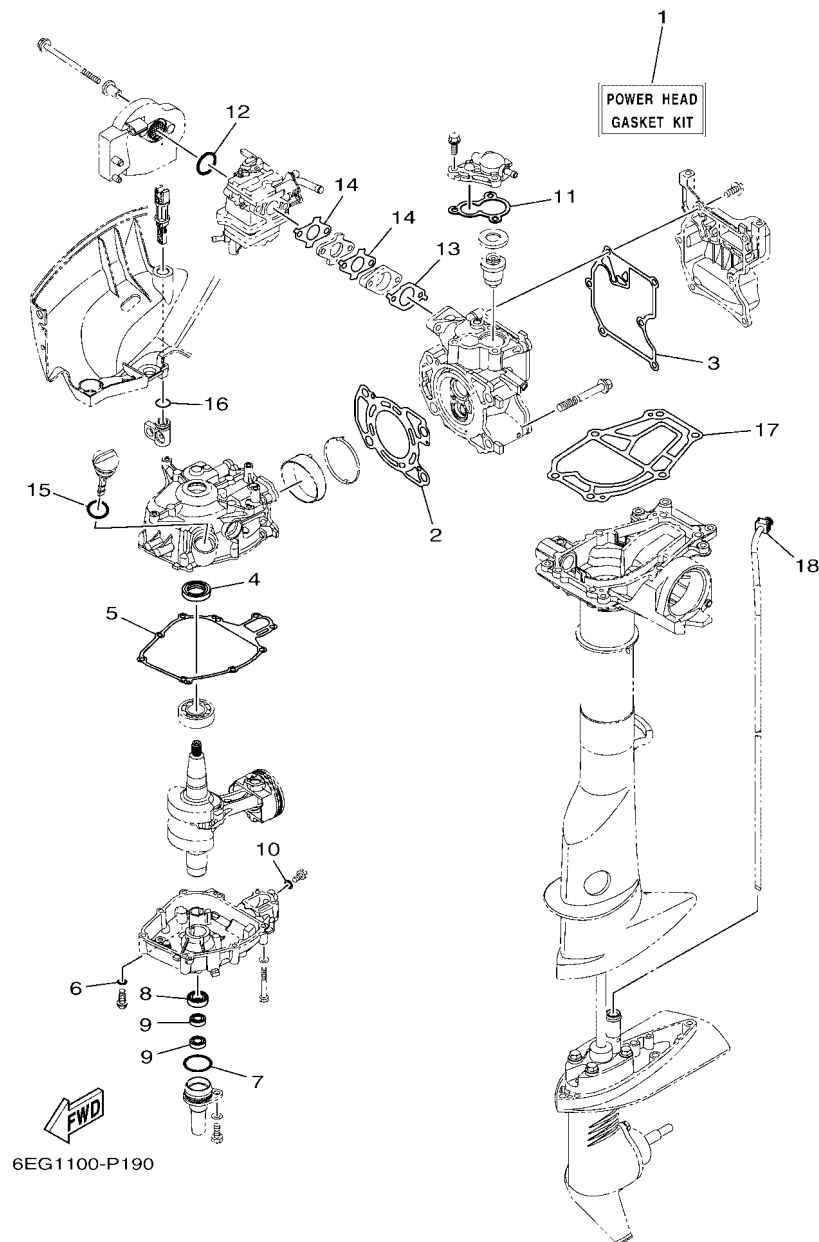


FIG. 19 REPAIR KIT 1

KITS DE REPARATION 1

REF. NO.	PART NO. N° PIECES	DESCRIPTION DESCRIPTION	6EG5				REMARKS REMARQUES
1	6EG-W0001-00	POWER HEAD GASKET KIT POCHETTE DE JINTS TETE MOTRICE	1				
2	6EG-E1181-00	.GASKET, CYLINDER HEAD 1 .JOINT, DE CULASSE 1	1				
3	6EG-E1193-00	.GASKET, HEAD COVER 1 .JOINT, COUVERCLE DE CULASSE 1	1				
4	93102-20814	.OIL SEAL .JOINT SPY	1				
5	6EG-11351-00	.GASKET, CYLINDER .JOINT, D'EMBASE	1				
6	90201-08818	.WASHER, PLATE .RONDELLE, PLATE	1				
7	93210-35803	.O-RING .JOINT TORIQUE	1				
8	93102-20814	.OIL SEAL .JOINT SPY	1				
9	93102-09800	.OIL SEAL .JOINT SPY	2				
10	90430-08143	.GASKET .JOINT	1				
11	67D-12414-A0	.GASKET, COVER .JOINT, COUVERCLE	1				
12	93210-20801	.O-RING .JOINT TORIQUE	1				
13	6EG-E3645-00	.GASKET, MANIFOLD 1 .JOINT, TUBULURE 1	1				
14	6EG-E3646-00	.GASKET, MANIFOLD 2 .JOINT, TUBULURE 2	2				
15	93210-24800	.O-RING .JOINT TORIQUE	1				
16	93210-128F6	.O-RING .JOINT TORIQUE	1				
17	6EG-G5113-00	.GASKET, UPPER CASING .JOINT, TUBE D'ARBRE	1				
18	6EE-G4365-00	.DAMPER, WATER SEAL 1 .JOINT, TUBE D'EAU 1	1				

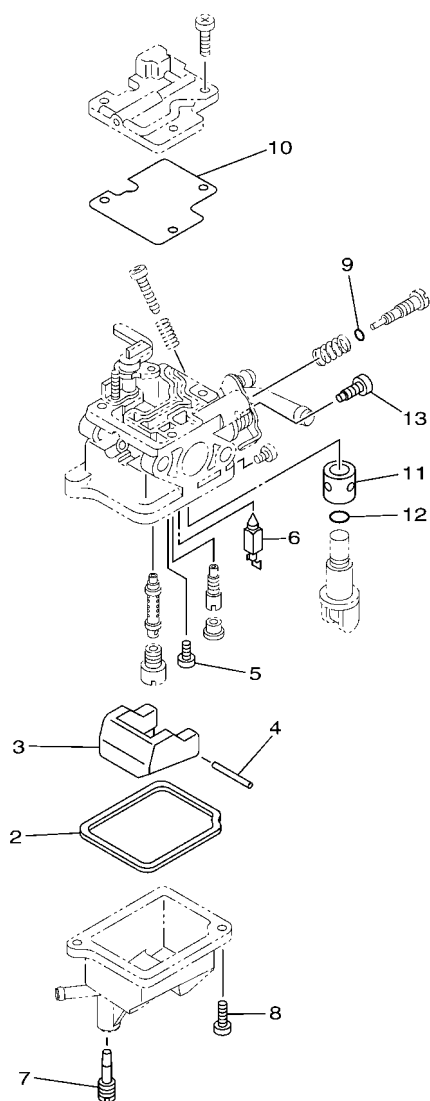

KITS DE REPARATION 2

[illegible]

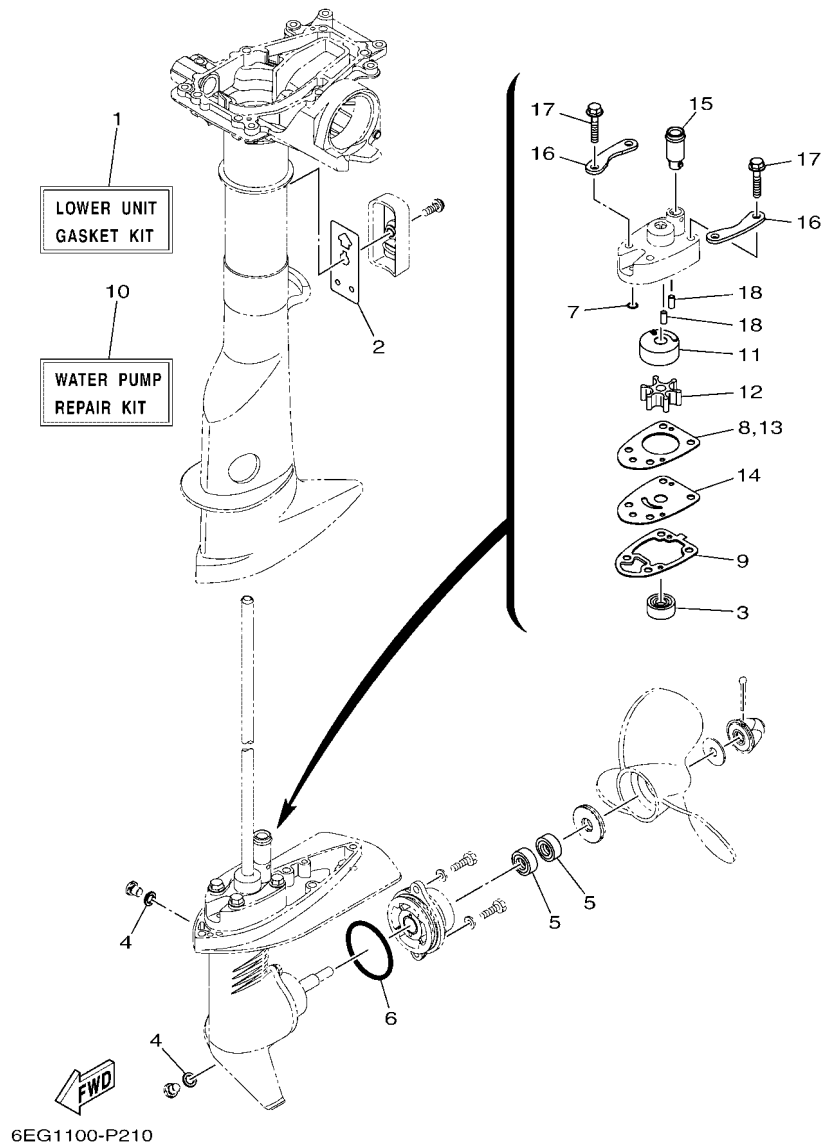


FIG. 21 REPAIR KIT 3

KITS DE REPARATION 3

REF. NO.	PART NO. N° PIECES	DESCRIPTION DESCRIPTION	6EG5					REMARKS REMARQUES
1	6EG-W0001-20	LOWER UNIT GASKET KIT POCHETTE DE JOINTS EMBASE	1					
2	6EG-G5115-00	.GASKET, UPPER CASING .JOINT, TUBE D'ARBRE	1					
3	93103-09800	.OIL SEAL .JOINT SPY	1					
4	90430-08003	.GASKET .JOINT	2					
5	93101-13800	.OIL SEAL .JOINT SPY	2					
6	93210-48800	.O-RING .JOINT TORIQUE	1					
7	93210-05001	.O-RING .JOINT TORIQUE	1					
8	6EG-G4315-00	.GASKET, WATER PUMP .JOINT, POMPE A EAU	1					
9	6EG-G5315-00	.PACKING, LOWER CASING .JOINT, BOITIER D'HELICE	1					
10	6EG-W0078-01	WATER PUMP REPAIR KIT KIT DE REPARATION DE LA POMPE	1					
11	6EG-G4322-00	.INSERT, CARTRIDGE .CUVETTE	1					
12	6L5-44352-00	.IMPELLER .TURBINE	1					
13	6EG-G4315-00	.GASKET, WATER PUMP .JOINT, POMPE A EAU	1					
14	6EG-G4323-00	.OUTER PLATE, CARTRIDGE .PLAQUE EXTERIEURE	1					
15	6EE-G4366-00	.DAMPER, WATER SEAL 2 .JOINT, TUBE D'EAU 2	1					
16	6EG-G4328-00	.PLATE .PLAQUETTE	2					
17	97E95-06535	.BOLT, HEXAGON W/W DEEP RECESS .VIS HEXAGONAL AVC RONDELLE	4					
18	93604-12M07	.PIN, DOWEL .CLAVETTE	2					

NUMERICAL INDEX
INDEX NUMERIQUE

PART NO. N° PIECES	REF. NO.	PART NO. N° PIECES	REF. NO.	PART NO. N° PIECES	REF. NO.	PART NO. N° PIECES	REF. NO.	PART NO. N° PIECES	REF. NO.	PART NO. N° PIECES	REF. NO.
90105-08M36	3 - 5	90467-07M12	17 - 26	93420-22M03	18 - 18						
90105-08M76	5 - 12	90467-09M09	3 - 20	93450-13811	4 - 8						
90119-06098	9 - 13		7 - 8	93505-16024	14 - 3						
90119-06M17	12 - 13	90467-11M08	9 - 23	93604-07M13	17 - 16						
90119-06MA2	3 - 17	90467-13M13	9 - 16	93604-12M07	3 - 6						
90119-06ME0	14 - 14	90468-100A0	9 - 6		5 - 11						
90152-05011	13 - 15	90480-25161	11 - 8		16 - 7						
90157-05013	12 - 5	90501-10064	17 - 32		17 - 24						
90159-05M12	9 - 22	90501-100A5	9 - 4		18 - 6						
	16 - 5	90501-12802	14 - 4		18 - 19						
90159-06M11	16 - 12	90501-12803	15 - 32		21 - 18						
90167-03M02	12 - 16	90501-23215	13 - 13	93700-06M03	15 - 27						
90170-10M33	11 - 4	91490-16010	13 - 22		16 - 9						
90179-11800	7 - 14		14 - 11	94702-00372	1 - 8						
90201-06040	15 - 36	91490-25030	18 - 11		3 - 21						
90201-06M62	13 - 35	91609-25014	14 - 16	95380-05600	13 - 38						
90201-08818	5 - 13	91690-20010	15 - 22	95380-08600	15 - 10						
	19 - 6	92903-06600	5 - 10	95380-08800	15 - 11						
90201-08M54	18 - 12	92990-04200	9 - 5	95780-06300	15 - 37						
90201-105A2	11 - 5	92990-05600	14 - 10	95817-06012	5 - 22						
90201-10M02	13 - 14	92990-06300	18 - 5	95D95-06012	18 - 4						
90201-13198	18 - 9	92990-06600	18 - 17	97013-06045	5 - 9						
90201-168G9	6 - 6	92990-08200	15 - 9	97595-05512	14 - 8						
90201-23008	4 - 2	93101-13800	17 - 10	97880-05025	3 - 15						
90202-08004	15 - 8		21 - 5	97885-05012	13 - 19						
90202-08022	15 - 7	93102-09800	5 - 17	97890-04007	8 - 2						
90243-04M01	15 - 4		19 - 9	97D75-08025	13 - 9						
90266-04M05	15 - 31	93102-20814	5 - 2	97D95-08014	5 - 19						
90280-04M06	11 - 3		5 - 16	97E75-06530	15 - 16						
90340-08002	17 - 7		19 - 4	97E75-06535	16 - 8						
90386-08032	13 - 16		19 - 8	97E95-06512	11 - 9						
	15 - 21	93103-09800	17 - 5	97E95-06516	17 - 12						
90387-06076	7 - 5		21 - 3	97E95-06520	13 - 34						
90387-06176	9 - 12	93210-05001	17 - 17	97E95-06525	16 - 14						
90387-06252	13 - 27		21 - 7	97E95-06530	18 - 7						
90387-068N9	12 - 11	93210-09811	14 - 2	97E95-06535	13 - 33						
90387-06M24	13 - 32	93210-128F6	9 - 20		17 - 23						
90430-08003	1 - 7		19 - 16		21 - 17						
	17 - 8	93210-20801	7 - 3	97E95-06560	10 - 13						
	21 - 4		19 - 12	97E95-06585	7 - 4						
90430-08143	1 - 1	93210-24800	5 - 24	97E95-08520	5 - 18						
	5 - 20		19 - 15	98580-03005	8 - 11						
	19 - 10	93210-35803	5 - 15		20 - 5						
90445-09808	3 - 18		19 - 7	98580-04010	8 - 14						
90446-06M90	11 - 14	93210-48800	17 - 11		20 - 8						
90464-07M20	13 - 24		21 - 6	99001-06600	17 - 28						
90464-09013	3 - 19	93306-272Y2	5 - 3	99080-04600	15 - 26						
90464-16003	11 - 15	93316-003Y0	17 - 6								